

L2082 Rev. E 04/07

P-80, 1006 Models with Date Code Beginning with the Letter "D".
P-84 Models with Date Code Beginning with the Letter "A".

Index:

English 1-4
Français 5-8

To Protect Your Warranty, Use Only ENERPAC Hydraulic Oil.
Enerpac recommends that all kit components be installed to insure optimum performance of the repaired unit.

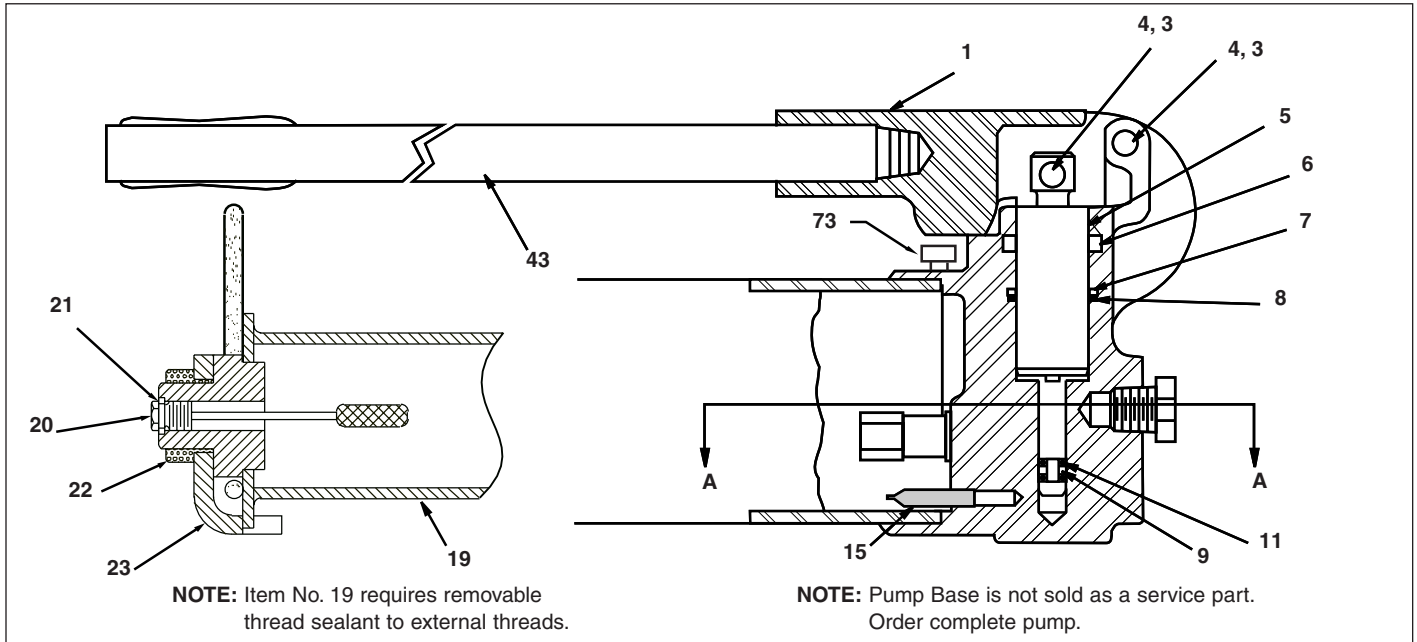


Figure 1, Pump Assembly

Repair Parts List for Figure 1				
Item	Model P-80, 1006	Model P-84	Quantity	Description
1	B113060-1	B113060-1	1	Beam
3	★ DA1177349	† DA1177349	2	Retaining Ring
4	DC106061SR1	DC106061SR1	4	Beam Pin (Includes item 3)
5	CN464051SR2	CN464051SR2	1	Pump Plunger (Includes Items 3, 4, 6, 7, 8, 9, 11)
6	★ C912044	† C912044	1	Wiper Ring
7	★ B1216565	† B1216565	1	Back-up Ring
8	★ B1021503	† B1021503	1	O-ring Packing
9	★ B1011803	† B1011803	1	O-ring
11	★ B1011564	† B1011564	1	Back-up Ring
15	★ P30718	† P30718	1	Oil Strainer Screen
19	B245900SR	B245900SR	1	Reservoir Assembly
20	CL244950W	CL244950W	1	Filler Plug (Includes item 21)
21	★ B159167	† B159167	4	Gasket
22	S4123	S4123	1	Jam Nut
23	B242267	B242267	1	Pump Rest
43	C7900SR	C7900SR	1	Handle Assembly
73	CA561024	CA561024	1	Vent

★ Items are included in Repair Kit P80K4. (Viton Kit: P-80 use P80KV3.)

† Items are included in Repair Kit P84K3. (Viton Kit: P-84 use P84KV3.)

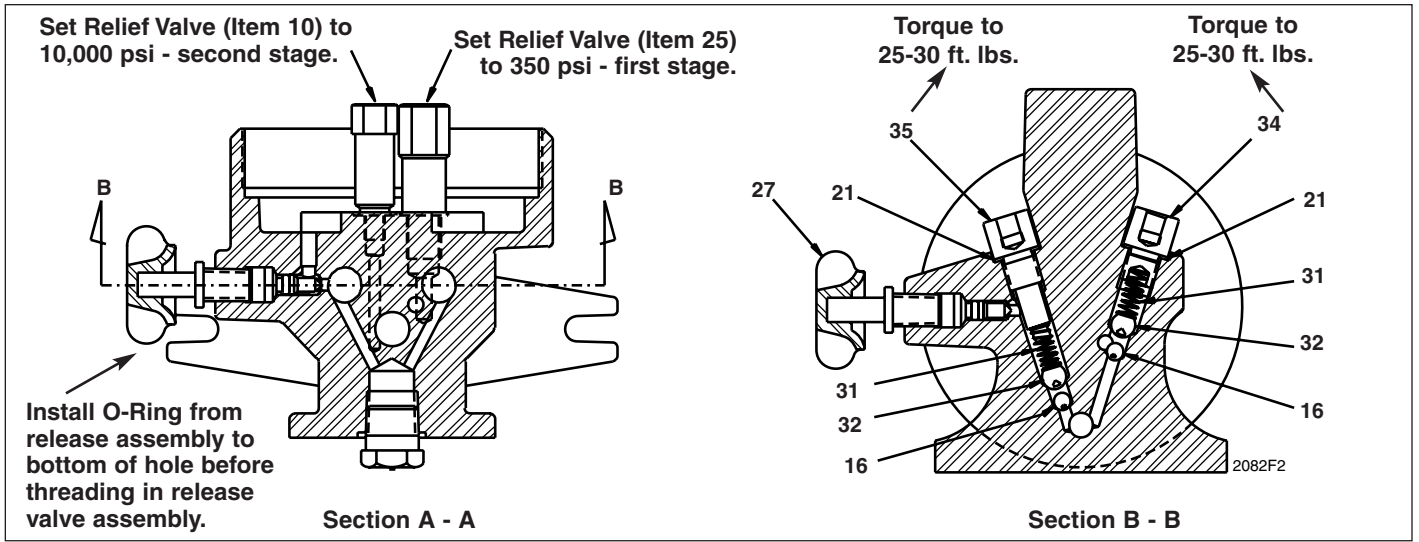


Figure 2, Pump Head

Repair Parts List for Figure 2

Item No.	Model P-80, 1006	Model P-84	Quantity	Description
10	A8613900SR	A8613900SR	1	Relief Valve (includes Item 38)
16	★ B1006016	† B1006016	2	7/32" Ball
21	★ B159167	† B159167	4	Gasket
25	C960900SR	C960900SR	1	By-pass Valve (Includes Item 21)
27	CL655950SR	—	1	Release Valve (Includes Items 28, 29, 30)
31	★ S1183	† S1183	2	Spring
32	★ B1009016	† B1009016	2	5/16" Ball
34	B249185SR	B249185SR	1	Valve Plug (Includes Items 21, 31, 32, 16)
35	DA2526006SR	DA2526006SR	1	Valve Plug (Includes Items 16, 21, 31, 32)

★ Items are included in Repair Kit P80K4. (Viton Kits: P-80 use P80KV3.)

† Items are included in Repair Kit P84K3. (Viton Kits: P-84 use P84K3V.)

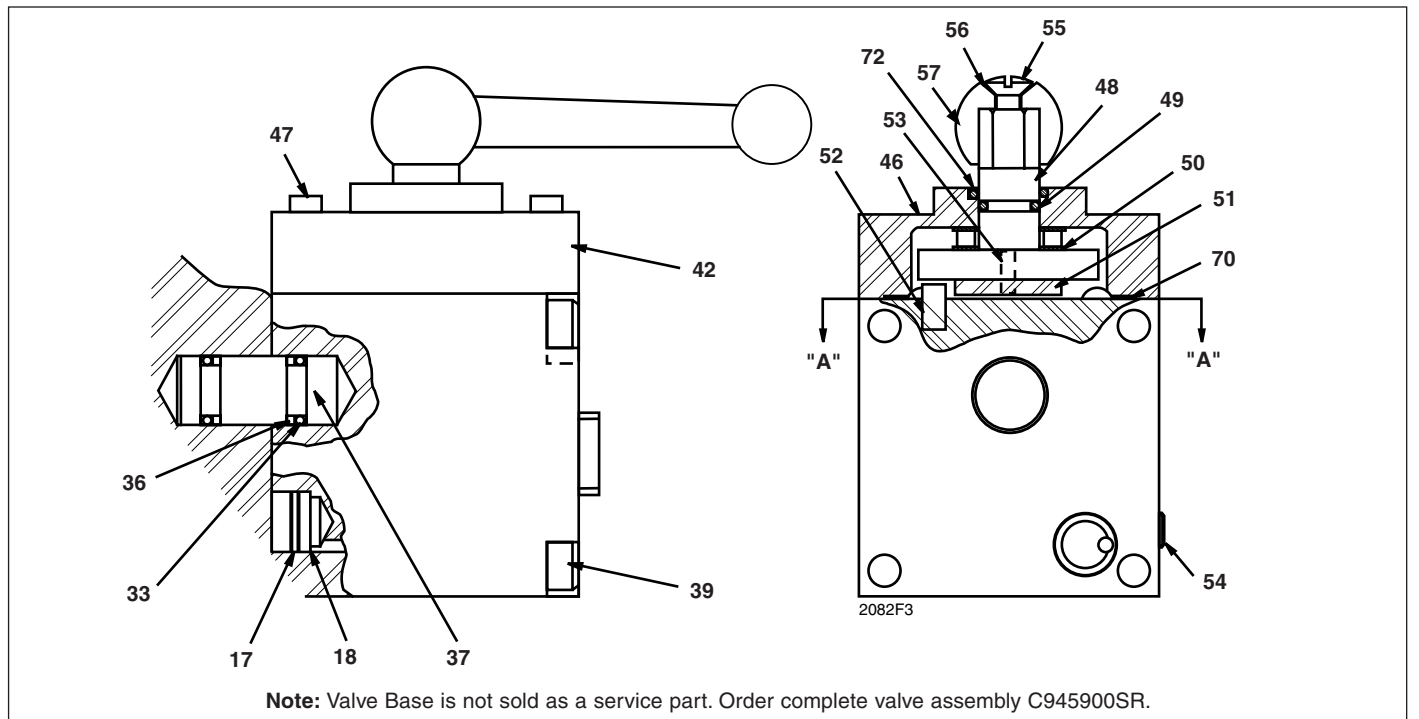


Figure 3, P-84 Valve Assembly

Repair Parts List for Figure 3

Item No.	Model P-84	Quantity	Description
17	★★† CJ416041	1	Seal Ring
18	† B1084108	1	Washer
33	† B1008503	2	O-ring
36	† B1110564	2	Back-up Washer
37	C952270SR	1	Connector
39	B1025028	4	Cap Screw
42	C945900SR	1	4-Way Valve Assembly (Includes Items 17, 18, 33, 36)
46	C934162SR	1	Valve Body Cap (Includes Item 70)
47	B1332028	4	Socket Head Cap Screw
48	C932071SR	1	Disc (Includes Items 49, 50, 51, 52, 53)
49	★★ B1007503	1	O-ring
50	★★ C940155	1	Needle Thrust Bearing
51	★★ C933561	1	Disc Bar
52	★★ C939153	1	Groove Pin
53	★★ B1049057	2	Spring Pin
54	★★ A1006245	7	Pipe Plug
55	★★ P45138	1	Screw
56	★★ P45139	1	Lock Washer
57	P6012SR	1	Release Valve Lever (Includes Items 55, 56)
70	★★ C957037	1	Gasket
72	★★ A1028476	1	Seal

★★ Items are included in Repair Kit C945900K.

† Items are included in Repair Kit P84K3. (Viton Kits: P-84 use P80K3V.)

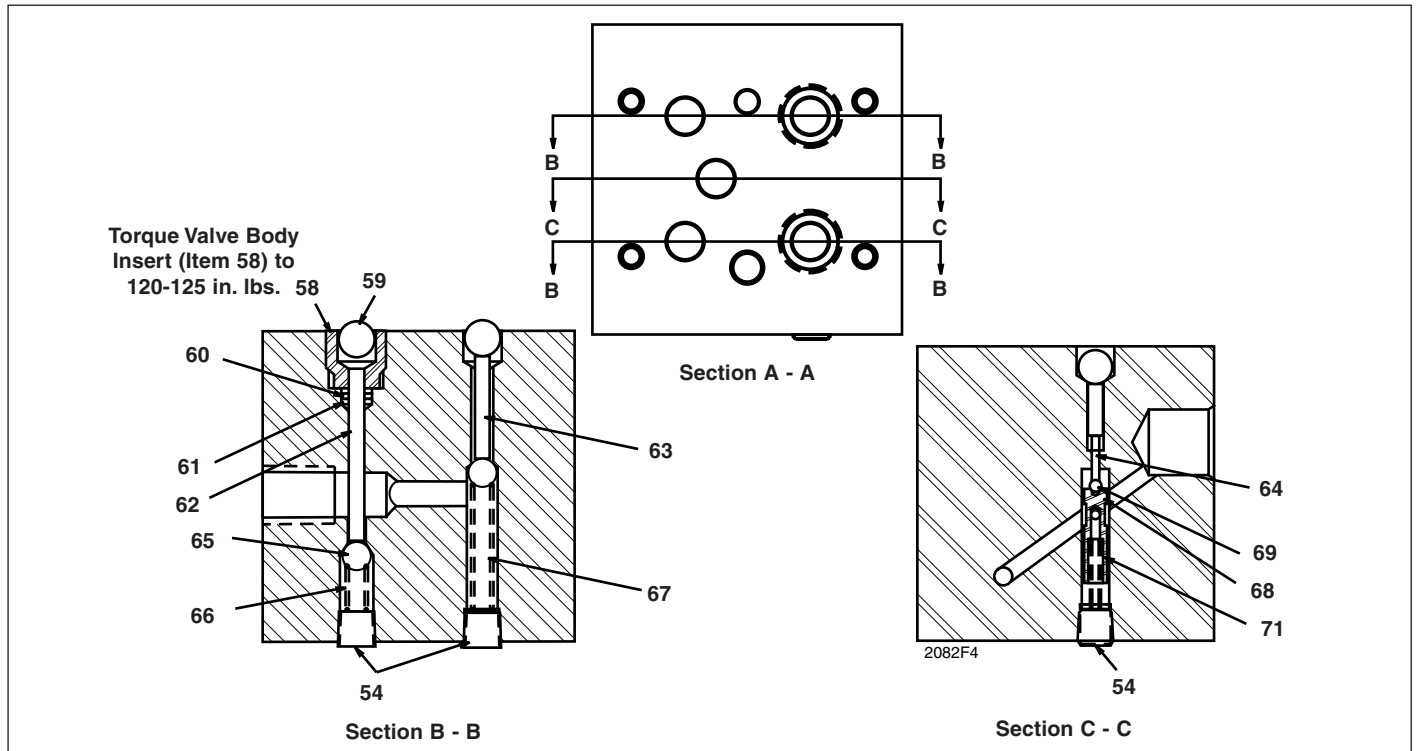


Figure 4, P84 Valve Body

Repair Parts List for Figure 4

Item No.	Model P-84	Quantity	Description
54	★★ A1006245	7	Pipe Plug
58	C861439SR	2	Valve Body Insert (Includes Items 57, 59, 60, 61, 62, 65, 66)
59	★★ B1008016	2	Ball
60	★★ DA5776186	2	Spacer
61	★★ B1001503	2	O-ring
62	★★ C864153	2	Push Pin
63	★★ C863153	2	Push Pin
64	★★ C944153	1	Push Pin
65	★★ B1006016	4	Ball
66	★★ C830110	2	Spring
67	★★ C955110	2	Spring
68	F4570SR	1	Spring / Ball Cap Assembly (Includes Items 64, 67, 71)
69	★★ B1002016	1	Ball
71	★★ DA5769110	1	Spring

★★ Items are included in Repair Kit C945900K.

† Items are included in Repair Kit P84K3. (Viton Kits: P-84 uses P84K3V.)

Enerpac Worldwide Locations

Africa
ENERPAC Middle East FZE
P.O. Box 18004
Jebel Ali, Dubai
United Arab Emirates
Tel: +971 (0)4 8872686
Fax: +971 (0)4 8872687

Australia
Actuant Australia Ltd.
Block V Unit 3
Regents Park Estate
391 Park Road
Regents Park NSW 2143
(P.O. Box 261) Australia
Tel: +61 297 438 988
Fax: +61 297 438 648

Brazil
Power Packer do Brasil Ltda.
Rua dos Inocentes, 587
04764-050 - Sao Paulo (SP)
Tel: +55 11 5687 2211
Fax: +55 11 5686 5583
Toll Free in Brazil:
Tel: 0800 891 5770
vendasbrasil@enerpac.com

Canada
Actuant Canada Corporation
6615 Ordan Drive, Unit 14-15
Mississauga, Ontario L5T 1X2
Tel: +1 905 564 5749
Fax: +1 905 564 0305
Toll Free:
Tel: +1 800 268 4987
Fax: +1 800 461 2456
Technical Inquiries:
techservices@enerpac.com

China
Actuant China Ltd.
1F, 269 Fute N. Road
Waigaoqiao Free Trade Zone
Pudong New District
Shanghai, 200 131 China
Tel: +86 21 5866 9099
Fax: +86 21 5866 7156

Actuant China Ltd. (Beijing)
709B Diyang Building
Xin No. 2
Dong San Huan North Rd.
Beijing City
100028 China
Tel: +86 10 845 36166
Fax: +86 10 845 36220

Central and Eastern Europe, Greece
ENERPAC B.V.
Galvanistraat 115
P.O. Box 8097
6710 AB Ede
The Netherlands
Tel: +31 318 535 936
Fax: +31 318 535 951

France, Switzerland francophone
ACTUANT - ENERPAC
ZA de Courtaboeuf
32, avenue de la Baltique
91140 Villebon / Yvette
France
Tel: +33 1 60 13 68 68
Fax: +33 1 69 20 37 50

Germany, Austria and Switzerland
ENERPAC GmbH
P.O. Box 300113
D-40401 Düsseldorf
Germany
Tel: +49 211 471 490
Fax: +49 211 471 49 28

India
ENERPAC Hydraulics
(India) Pvt. Ltd.
Office No. 9,10 & 11,
Plot No. 56, Monarch Plaza,
Sector 11, C.B.D. Belapur
Navi Mumbai 400614, India
Tel: +91 22 2756 6090
Tel: +91 22 2756 6091
Fax: +91 22 2756 6095

✦ e-mail: info@enerpac.com

Italy
ENERPAC S.p.A.
Via Canova 4
20094 Corsico (Milano)
Tel: +39 02 4861 111
Fax: +39 02 4860 1288

Japan
Applied Power Japan Ltd.
Besshocho 85-7
Saitama-shi, Kita-ku,
Saitama 331-0821
Japan
Tel: +81 48 662 4911
Fax: +81 48 662 4955

Middle East, Turkey and Caspian Sea
ENERPAC Middle East FZE
P.O. Box 18004
Jebel Ali, Dubai
United Arab Emirates
Tel: +971 (0)4 8872686
Fax: +971 (0)4 8872687

Russia and CIS (excl. Caspian Sea Countries)
Actuant LLC
Admiral Makarov Street 8
125212 Moscow, Russia
Tel: +7-495-9809091
Fax: +7-495-9809092

Singapore
Actuant Asia Pte. Ltd.
25 Serangoon North Ave. 5
#03-01 Keppel Digihub
Singapore 554914
Thomson Road
P.O. Box 114
Singapore 915704
Tel: +65 64 84 5108
+65 64 84 3737
Fax: +65 64 84 5669
Toll Free: +1800 363 7722
Technical Inquiries:
techsupport@enerpac.com.sg

✦ internet: www.enerpac.com

South Korea
Actuant Korea Ltd.
3Ba 717,
Shihwa Industrial Complex
Jungwang-Dong, Shihung-Shi, Kyunggi-Do
Republic of Korea 429-450
Tel: +82 31 434 4506
Fax: +82 31 434 4507

Spain and Portugal
ENERPAC
C/San José Artesano 8
Pol. Ind.
28108 Alcobendas
(Madrid) Spain
Tel: +34 91 661 11 25
Fax: +34 91 661 47 89

The Netherlands, Belgium, Luxembourg, Sweden, Denmark, Norway, Finland and Baltic States
ENERPAC B.V.
Galvanistraat 115
P.O. Box 8097, 6710 AB Ede
The Netherlands
Tel: +31 318 535 911
Fax: +31 318 525 613
+31 318 535 848
Technical Inquiries Europe:
techsupport.europe@enerpac.com

United Kingdom, Ireland
ENERPAC Ltd.
Enerpac Ltd
Bentley Road South
Darlaston, West Midlands
WS10 8LQ, United Kingdom
Tel: +44 (0)121 50 50 787
Fax: +44 (0)121 50 50 799

USA, Latin America and Caribbean
ENERPAC
P.O. Box 3241
6100 N. Baker Road
Milwaukee, WI 53209 USA
Tel: +1 262 781 6600
Fax: +1 262 783 9562

All Enerpac products are guaranteed against defects in workmanship and materials for as long as you own them.
For your nearest authorized Enerpac Service Center, visit us at www.enerpac.com

Inquiries/orders:
+1 800 558 0530
Technical Inquiries:
techservices@enerpac.com

Contracter Enerpac en cas de doute quant à l'utilisation du produit.

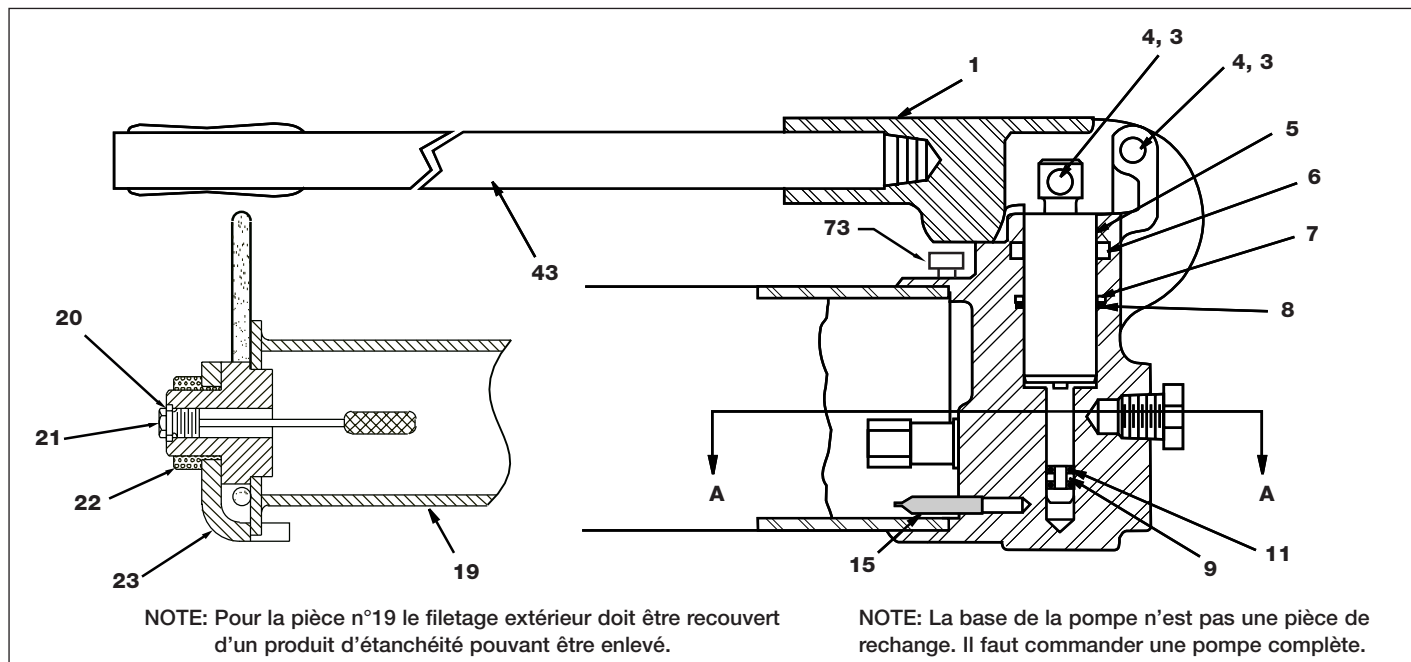


Figure 1, ensemble pompe

Liste pièces de rechange pour figure 1

Pièce n°	Modèle P-80, 1006	Modèle P-84	Quantité	Description
1	B113060-1	B113060-1	1	Levier
3	★	†	2	Bague de retenue
4	DC106061SR1	DC106061SR1	4	Axe de levier (comprend pièce 3)
5	CN464051SR2	CN464051SR2	1	Plongeur (comprend pièces 3, 4, 6, 7, 8, 9, 11)
6	★ C912044	† C912044	1	Joint racler
7	★ B1216565	† B1216565	1	Bague support
8	★ B1021503	† B1021503	1	Garniture joint torique
9	★ B1011803	† B1011803	1	Joint torique
11	★ B1011564	† B1011564	1	Bague support
15	★ P30718	† P30718	1	Tamis crépine
19	B245900SR	B245900SR	1	Ensemble réservoir
20	CL244950W	CL244950W	1	Bouchon remplissage (comprend pièce 21)
21	★ B159167	† B159167	4	Joint
22	S4123	S4123	1	Contre-écrou
23	B242267	B242267	1	Support pompe
43	C7900SR	C7900SR	1	Ensemble levier de commande
73	CA561024	CA561024	1	Passage

★ Pièces comprises dans le kit de réparation P80K4. (Kit Viton : P80KV3 pour P-80).

† Pièces comprises dans le kit de réparation P84K3. (Kit Viton : P84K3V pour P-84).

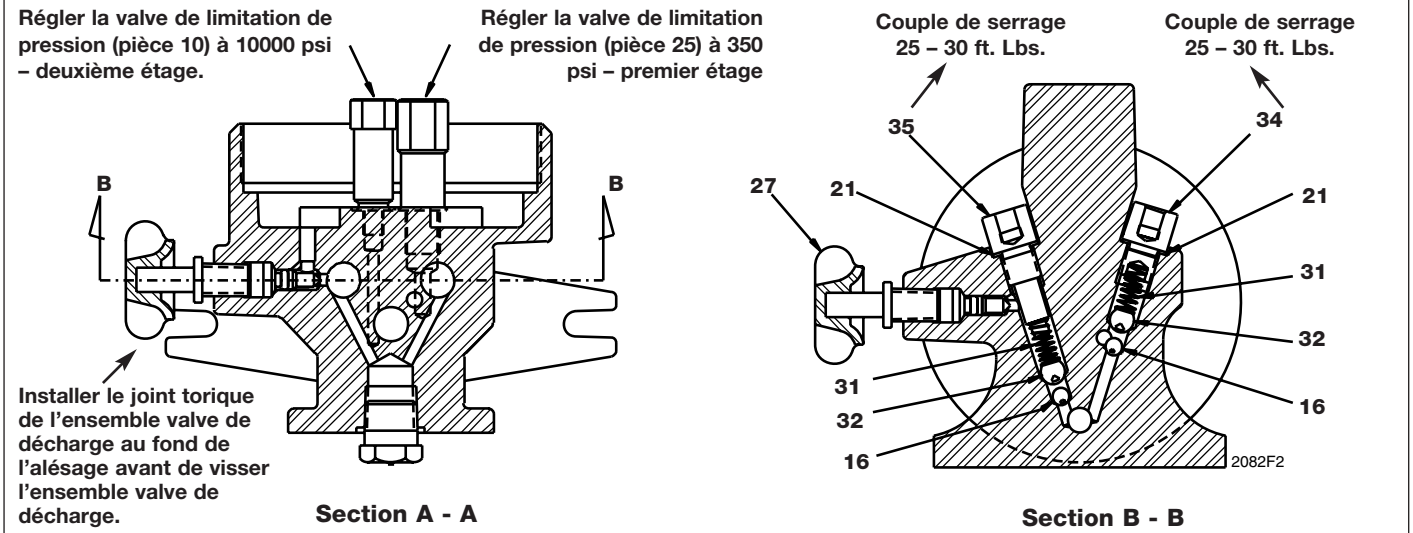


Figure 2, tête de pompe

Liste pièces de rechange pour figure 2

Pièce n°	Modèle P-80, 1006	Modèle P-84	Quantité	Description
10	A8613900SR	A8613900SR	1	Valve limitation pression (comprend pièce 38)
16	★ B1006016	† B1006016	2	Bille 7/32"
21	★ B159167	† B159167	4	Joint
25	C960900SR	C960900SR	1	Valve de dérivation (comprend pièce 21)
27	CL655950SR		1	Valve limitation pression (comprend pièces 28, 29, 30)
31	★ S1183	† S1183	2	Ressort
32	★ B1009016	† B1009016	2	Bille 5/16"
34	B249185SR	B249185SR	1	Bouchon valve (comprend pièces 21, 31, 32, 16)
35	DA2526006SR	DA2526006SR	1	Bouchon valve (comprend pièces 16, 21, 31, 32, 16)

★ Pièces comprises dans le kit de réparation P80K4. (Kits Viton : P80KV3 pour P-80).

★ Pièces comprises dans le kit de réparation P84K3. (Kits Viton : P84K3V pour P-84).

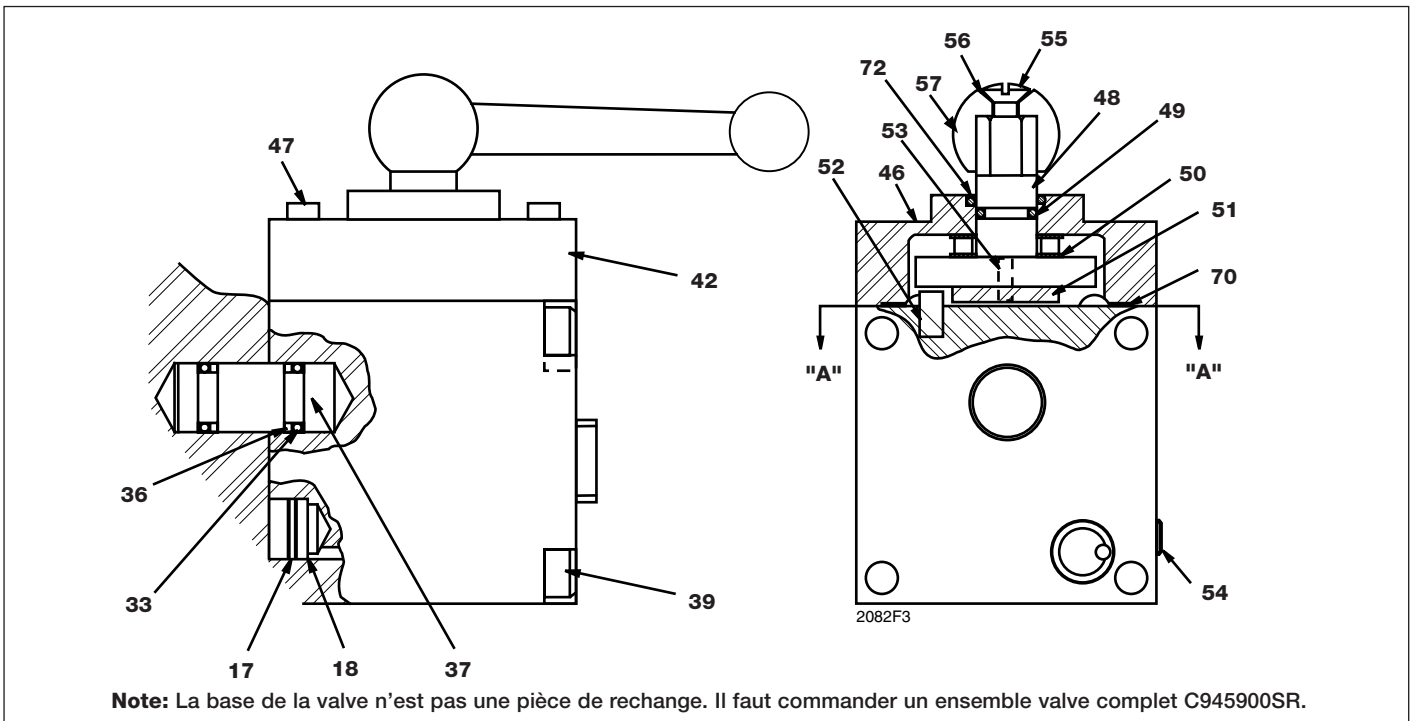


Figure 3, ensemble valve P-84

Liste pièces de rechange pour figure 3

Pièce n°	Modèle P-84	Quantité	Description
17	★★†	CJ416041	1 Bague d'étanchéité
18	† B1084108	1	Rondelle
33	† B1008503	2	Joint torique
36	† B1110564	2	Rondelle support
37	C952270SR	1	Connecteur
39	B1025028	4	Capuchon vis
42	C945900SR	1	Ensemble valve à 4 voies (comprend pièces 17, 18, 33, 36)
46	C934162SR	1	Capuchon corps de valve (comprend pièce 70)
47	B1332028	4	Logement capuchon vis
48	C932071SR	1	Disque (comprend pièces 49, 50, 51, 52, 53)
49	★★ B1007503	1	Joint torique
50	★★ C940155	1	Butée à aiguilles
51	★★ C933561	1	Barre disque
52	★★ C939153	1	Goupille rainure
53	★★ B1049057	2	Goupille ressort
54	★★ A1006245	7	Bouchon de tube
55	★★ P45138	1	Vis
56	★★ P45139	1	Rondelle d'arrêt
57	P6012SR	1	Levier valve de décharge (comprend pièces 55, 56)
70	★★ C957037	1	Joint
72	★★ A1028476	1	Joint d'étanchéité

★★ Pièces comprises dans le kit de réparation C945900K.

† Pièces comprises dans le kit de réparation P84K3. (Kits Viton : P84K3V pour P-84).

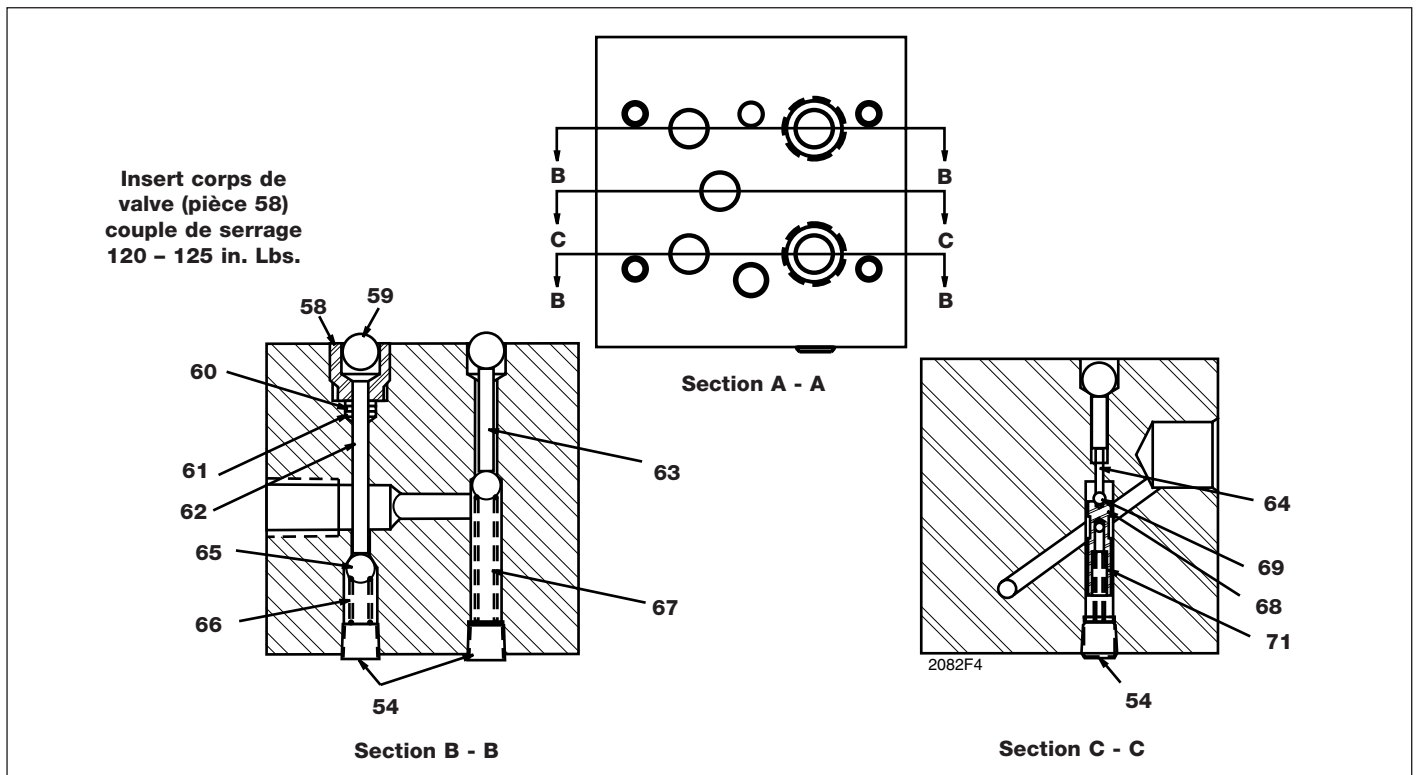


Figure 4, P84 Valve Body

Liste pièces de rechange pour figure 4

Pièce n°	Modèle P-84	Quantité	Description
54	★★ A1006245	7	Bouchon de tube
58	C861439SR	2	Insert corps de valve (comprend pièces 57, 59, 60, 61, 62, 65, 66)
59	★★ B1008016	2	Bille
60	★★ DA5776186	2	Entretoise
61	★★ B1001503	2	Joint torique
62	★★ C864153	2	Tige poussoir
63	★★ C863153	2	Tige poussoir
64	★★ C944153	1	Tige poussoir
65	★★ B1006016	4	Bille
66	★★ C830110	2	Ressort
67	★★ C955110	2	Ressort
68	F4570SR	1	Ensemble ressort capuchon bille comprend pièces 64, 67, 71)
69	★★ B1002016	1	Bille
71	★★ DA5769110	1	Ressort

★★ Pièces comprises dans le kit de réparation C945900K.

† Pièces comprises dans le kit de réparation P84K3. (Kits Viton : P84K3V pour P-84).

Enerpac Worldwide Locations

Africa

ENERPAC Middle East FZE
P.O. Box 18004
Jebel Ali, Dubai
United Arab Emirates
Tel: +971 (0)4 8872686
Fax: +971 (0)4 8872687

Australia

Actuant Australia Ltd.
Block V Unit 3
Regents Park Estate
391 Park Road
Regents Park NSW 2143
(P.O. Box 261) Australia
Tel: +61 297 438 988
Fax: +61 297 438 648

Brazil

Power Packer do Brasil Ltda.
Rua dos Inocentes, 587
04764-050 - Sao Paulo (SP)
Tel: +55 11 5687 2211
Fax: +55 11 5686 5583
Toll Free in Brazil:
Tel: 0800 891 5770
vendabrasil@enerpac.com

Canada

Actuant Canada Corporation
6615 Ordan Drive, Unit 14-15
Mississauga, Ontario L5T 1X2
Tel: +1 905 564 5749
Fax: +1 905 564 0305
Toll Free:
Tel: +1 800 268 4987
Fax: +1 800 461 2456

Technical Inquiries:

techservices@enerpac.com

China

Actuant China Ltd.
1F, 269 Fute N. Road
Waigaoqiao Free Trade Zone
Pudong New District
Shanghai, 200 131 China
Tel: +86 21 5866 9099
Fax: +86 21 5866 7156

Actuant China Ltd. (Beijing)

709B Diyang Building
Xin No. 2
Dong San Huan North Rd.
Beijing City
100028 China
Tel: +86 10 845 36166
Fax: +86 10 845 36220

Central and Eastern Europe, Greece

ENERPAC B.V.
Galvanistraat 115
P.O. Box 8097
6710 AB Ede
The Netherlands
Tel: +31 318 535 936
Fax: +31 318 535 951

France, Switzerland francophone

ACTUANT - ENERPAC
ZA de Courtaboeuf
32, avenue de la Baltique
91140 Villebon / Yvette
France
Tel: +33 1 60 13 68 68
Fax: +33 1 69 20 37 50

Germany, Austria and Switzerland

ENERPAC GmbH
P.O. Box 300113
D-40401 Düsseldorf
Germany
Tel: +49 211 471 490
Fax: +49 211 471 49 28

India

ENERPAC Hydraulics
(India) Pvt. Ltd.
Office No. 9,10 & 11,
Plot No. 56, Monarch Plaza,
Sector 11, C.B.D. Belapur
Navi Mumbai 400614, India
Tel: +91 22 2756 6090
Tel: +91 22 2756 6091
Fax: +91 22 2756 6095

◆ e-mail: info@enerpac.com

Italy

ENERPAC S.p.A.
Via Canova 4
20094 Corsico (Milano)
Tel: +39 02 4861 111
Fax: +39 02 4860 1288

Japan

Applied Power Japan Ltd.
Besshochou 85-7
Saitama-shi, Kita-ku,
Saitama 331-0821
Japan
Tel: +81 48 662 4911
Fax: +81 48 662 4955

Middle East, Turkey and Caspian Sea

ENERPAC Middle East FZE
P.O. Box 18004
Jebel Ali, Dubai
United Arab Emirates
Tel: +971 (0)4 8872686
Fax: +971 (0)4 8872687

Russia and CIS

(excl. Caspian Sea Countries)
Actuant LLC
Admiral Makarov Street 8
125212 Moscow, Russia
Tel: +7-495-9809091
Fax: +7-495-9809092

Singapore

Actuant Asia Pte. Ltd.
25 Serangoon North Ave. 5
#03-01 Keppel Digihub
Singapore 554914
Thomson Road
P.O. Box 114
Singapore 915704
Tel: +65 64 84 5108
+65 64 84 3737
Fax: +65 64 84 5669
Toll Free: +1800 363 7722
Technical Inquiries:
techsupport@enerpac.com.sg

◆ internet: www.enerpac.com

South Korea

Actuant Korea Ltd.
3Ba 717,
Shihwa Industrial Complex
Jungwang-Dong, Shihung-Shi, Kyunggi-Do
Republic of Korea 429-450
Tel: +82 31 434 4506
Fax: +82 31 434 4507

Spain and Portugal

ENERPAC
C/San José Artesano 8
Pol. Ind.
28108 Alcobendas
(Madrid) Spain
Tel: +34 91 661 11 25
Fax: +34 91 661 47 89

The Netherlands, Belgium, Luxembourg, Sweden, Denmark, Norway, Finland and Baltic States

ENERPAC B.V.
Galvanistraat 115
P.O. Box 8097, 6710 AB Ede
The Netherlands
Tel: +31 318 535 911
Fax: +31 318 525 613
+31 318 535 848

Technical Inquiries Europe:
techsupport.europe@enerpac.com

United Kingdom, Ireland

ENERPAC Ltd.
Enerpac Ltd
Bentley Road South
Darlaston, West Midlands
WS10 8LQ, United Kingdom
Tel: +44 (0)121 50 50 787
Fax: +44 (0)121 50 50 799

USA, Latin America and Caribbean

ENERPAC
P.O. Box 3241
6100 N. Baker Road
Milwaukee, WI 53209 USA
Tel: +1 262 781 6600
Fax: +1 262 783 9562

All Enerpac products are guaranteed against defects in workmanship and materials for as long as you own them.
For your nearest authorized Enerpac Service Center, visit us at www.enerpac.com

Inquiries/orders:
+1 800 558 0530
Technical Inquiries:
techservices@enerpac.com