

## Repair Parts Sheet

RC5 Series Hydraulic Cylinders RC50

Document Number	Revision	Revision Date	Product Date Code Beginning With
L4281	Rev. D	06/2022	В

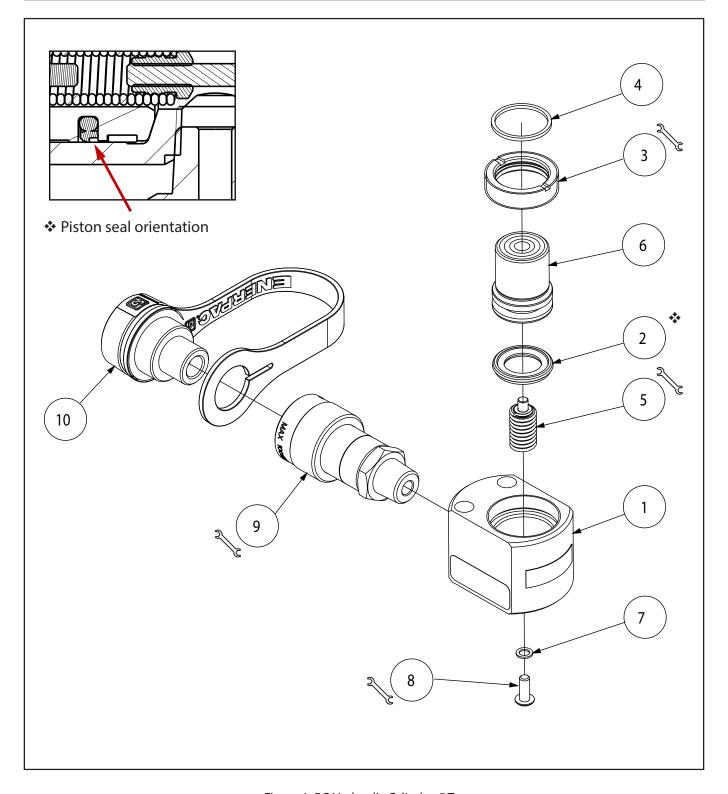


Figure 1, RC Hydraulic Cylinder, 5 Ton

Repair Parts List, Figure 1				
Item	Description	Qty	RC50	
1	Base	1	N/A	
2	Piston Seal	1	<b>A</b> •	
3	Stop Ring	1	CR34044	
4	Wiper	1	<b>A X</b>	
5	Spring Assembly	1	RC5K30	
6	Plunger	1	RC50040	
7	Copper Gasket	1	<b>A I</b>	
8	Screw, Button Head Socket #10-32 x .50"	1	<b>A I</b>	
9	Coupler	1	CR400	
10	Dust Cap ▲	1	CD411	
N/S	O-ring, coupler	1	<b>A</b>	
N/S	Enerpac Decal	1	<b>A</b>	
N/S	Warning Decal	1	<b>A</b>	

## Notes

- ▲ Indicated item included in and available as a part of the Repair Kit RC5NK0<sup>(1)</sup>
- Indicated item included in and available as a part of the Spring Assembly
- Indicated item included in and available as packs of 10 units in Seal Kit RC5NKS (see below)
- **≭** Indicated item included in and available as packs of 10 units in Wiper Kit RC5NKW2 (see below)
- ¥ Kits only available in America

(1) Viton® seals are available in the RC5NK0V seal kit. Viton® equipped coupler CR400V can also be ordered separately for a complete conversion.



Item nr.	Torque/ remark		
3	Secure with Loctite 222 and torque to 70-90 in-lbs [7.9-10.2 Nm]		
5	Secure with Loctite 222 and torque to 40-50 in-lbs [3.5-5.5 Nm]		
8	Torque to 40-50 in-lbs [3.5-5.5 Nm]		
9	Torque to 40-60 ft-lbs [54-81 Nm]		
	Use Loctite 545 or Teflon Tape		

