


Repair Parts Sheet	Revision	Revision Date	Product Code Beginning
L2815	Rev. D	09/2024	D

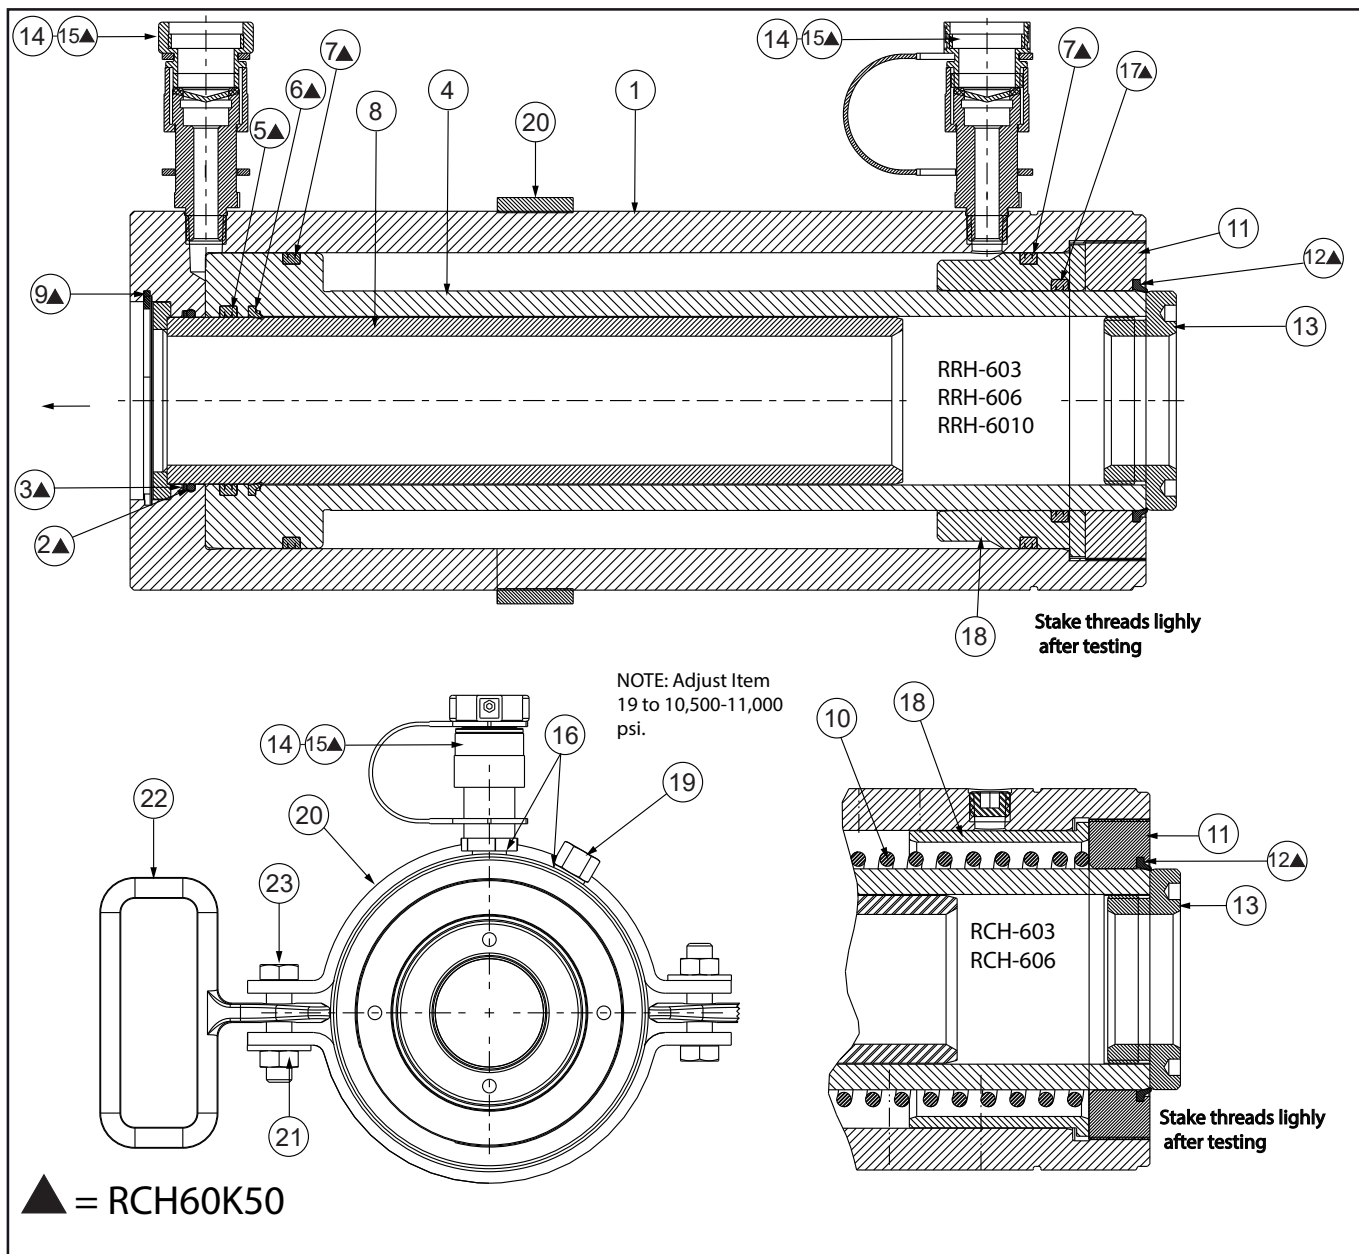

Note: See Page 2
for parts list.

(*) Notes

Item	Model	Torque / notes
11	RCH/RRH	Use Loctite 222
14	RCH/RRH	54 - 81 Nm - 40 - 60 ft lbs
14	RCH/RRH	Use Loctite 545 or teflon tape
19	RRH	54 - 81 Nm - 40 - 60 ft lbs
19	RRH	Use Loctite 545 or teflon tape

Repair Parts List

L2815

Item	Description	Qty.	RCH603	RCH606	RRH603	RRH606	RRH6010
1	Cylinder	1	Not available as spare part, order new cylinder.				
2	O-Ring	1	▲	▲	▲	▲	▲
3	Back Up Ring	1	▲	▲	▲	▲	▲
4	Plunger	1	DA4806040	DA4807040	DA4806040	DA4807040	DA4808040
5	Wiper Ring	1	▲	▲	▲	▲	▲
6	G-T® Ring	1	▲	▲	▲	▲	▲
7a	G-T® Ring	1	▲	▲			▲
7b	G-T® Ring	2			▲	▲	▲
8	Center Tube	1	DA809900	DA4810900	DA4809900	DA4810900	DA4811900
9	Retaining Ring	1	▲	▲	▲	▲	▲
10	Spring	1	DA4816110	DA4816110			
11	Stop Ring	1	CR106044	CR106044	CR106044	CR106044	CR106044
12	Wiper Ring	1	▲	▲	▲	▲	▲
13	Saddle	2	CB891045	CB891045	CB891045	CB891045	CB891045
14a	Coupler	1	CR400	CR400			
14b	Coupler	2			CR400	CR400	CR400
15a	Dust Cap	1	▲	▲			
15b	Dust Cap	2			▲	▲	▲
16	Flush Plug	2					
17	G-T® Ring	1			▲	▲	▲
18	Inner Stop Ring	1	DA4814268	DA4814268	DA4813044	DA4813044	DA4813044
19	Relief Valve	1			▲	▲	▲
20	Collar (includes 21, 22, 23)	2	DA5238900SR	DA5238900SR	DA5238900SR	DA5238900SR	DA5238900SR
21	Nut	2					
22	Handle	2					
23	Bolt	2					
24	Decal Hollow (not shown)	1	▲	▲	▲	▲	▲
25	Decal Warning (not shown)	1	▲	▲	▲	▲	▲
26	Decal Warning (not shown)	1	▲	▲	▲	▲	▲
27	Dust Cap (not shown)	2	▲	▲	▲	▲	▲
28	Collar Thread Protector (not shown)	1	▲	▲	▲	▲	▲
	Repair Kit	1	RCH60K50	RCH60K50	RCH60K50	RCH60K50	RCH60K50

▲ = indicates items included in and available only as part of Repair Kit RCH60K50.



To maintain your warranty,
have your products inspected and repaired
by an authorised Enerpac Service Centre
www.enerpac.com